


# PIV Securement Instructions

Steps for securement for patients 1 month post term and older:



Note about arm boards: the tape used to secure the arm should be placed as far away from the insertion site as possible.

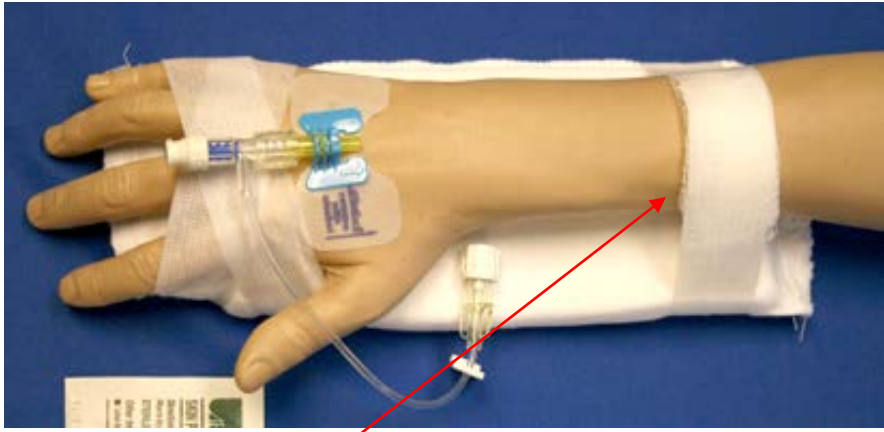

1. Insert catheter & attach Luer-Lock T-connector.



2. Apply no-sting barrier and let dry until tacky.



3. Secure Stat-Lock: Press, Pinch, Peel.



4. Place foam tape under Luer-Lock.



5. Place Tegaderm over the site covering insertion site and catheter hub.



6. Place strip of Transpore white tape across Luer-Lock. DO NOT press Luer-Lock into skin.